

PANASONIC KXT-A RANGE

1. Be sure the handset is on the cradle and the SP-PHONE button is off.
2. To program, set the MEMORY switch on the proprietary telephone to PROGRAM.
3. Dial 0.
4. Enter Year – Last two digits.
5. Enter Month – 01 through 12.
6. Enter Day – 01 through 31.
7. Enter Day Of Week – 0: for Sun, 1: for Mon etc.
8. Enter Hour – 01 through 12.
9. Enter Minute – 00 through 59.
10. Dial 0 for AM or 1 for PM.
11. Press AUTO DIAL/STORE.
12. After programming, return the MEMORY switch to the “SET” position.

PANASONIC KXT-D RANGE

1. The time can be changed from the first extension, usually extension 201. This must be a display type telephone.
2. Press the program key (or pause), followed by the * key twice, followed by 1234
3. Enter 000 and press the 'Sp-phone' key twice.
4. Enter the hour (2 digits), followed by the FWD/DND key, enter minutes (2 digits), followed by the FWD/DND key.
5. Press the AUTO ANSWER key to select between AM or PM.
6. Press the AUTO DIAL key, followed by HOLD and then Program (or Pause) to exit.

Panasonic VP50, 100 200 Voice Processor

1. The time within the Voice Processing System can be reprogrammed from any extension.
2. Firstly access the voicemail, for example on the KXTD you would dial 265.
3. Dial #6, followed by *998
4. Dial 4 to set the time and date
5. Dial 1 to change the current setting
6. Enter the current time and press #
7. Enter 1 for AM or 2 for PM
8. Press 2 to accept
9. Press 1 to change the current setting. This will change the date.
10. Enter the month and press #
11. Enter the day and press #
12. Enter the last 2 digits of the year and press #
13. Press 2 to accept