

CHANGING THE TIME ON THE NEC XN-120

- 1. Use the programming extension, usually the lowest number.**
- 2. Do not lift the handset**
- 3. Press SPK**
- 4. Press # then * then # then ***
- 5. Press 0000**
- 6. Press HOLD**
- 7. Press 100105**
- 8. Enter the hour in 24 hour mode**
- 9. Press Hold then DC then DC then DC**
- 10. Press SPK**